


Installation Manual

GEN_VMT Penray 01 Panel

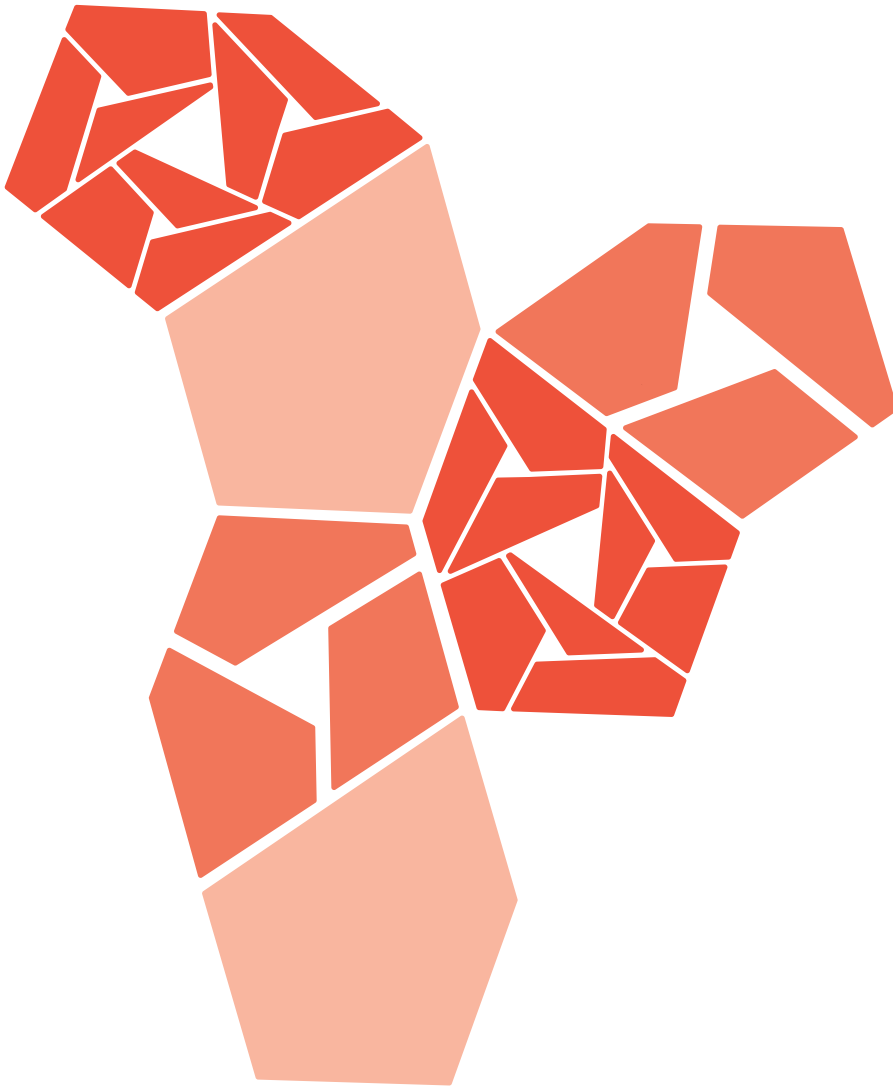


reddot winner 2020


MATERIAL NEEDED:

Included


PENRAY 01_Panels

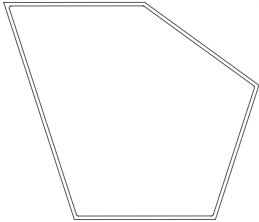

Panel 01.
1 | 2 uni.

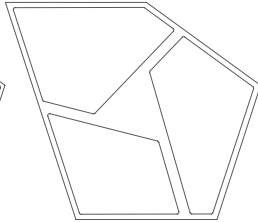


Panel 01.
2 | 2 uni.

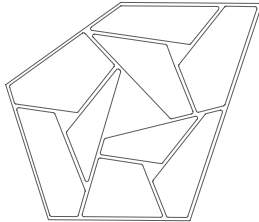


Panel 01.
3 | 2 uni.


Not Included




Level



Measuring Tape






Box Cutter



Glue


POSSIBLE SETUP EXAMPLES

One box (6 panels)

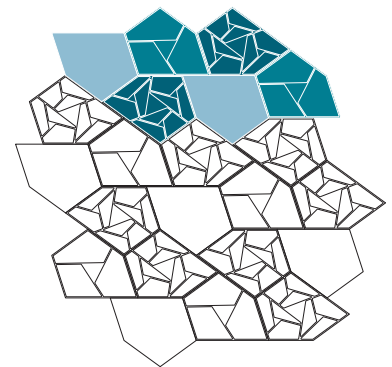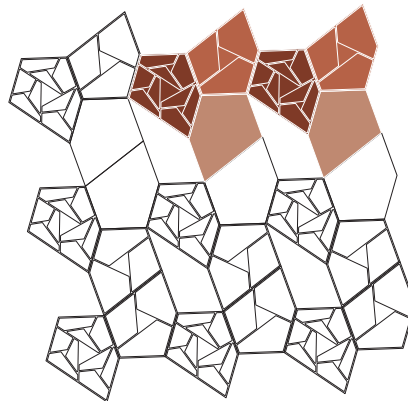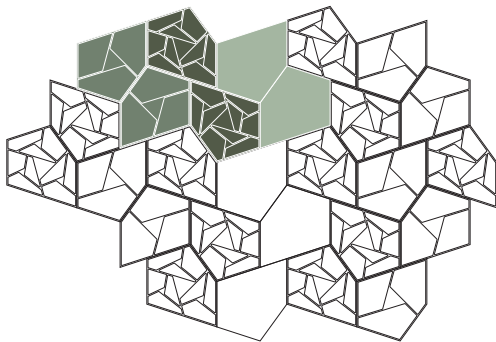


1

Apply Flexi Glue Ultra on the back of the acoustic panel, near the edges and in the center. Do not wait longer than 5 minutes after applying the glue to attach the panel to the wall.

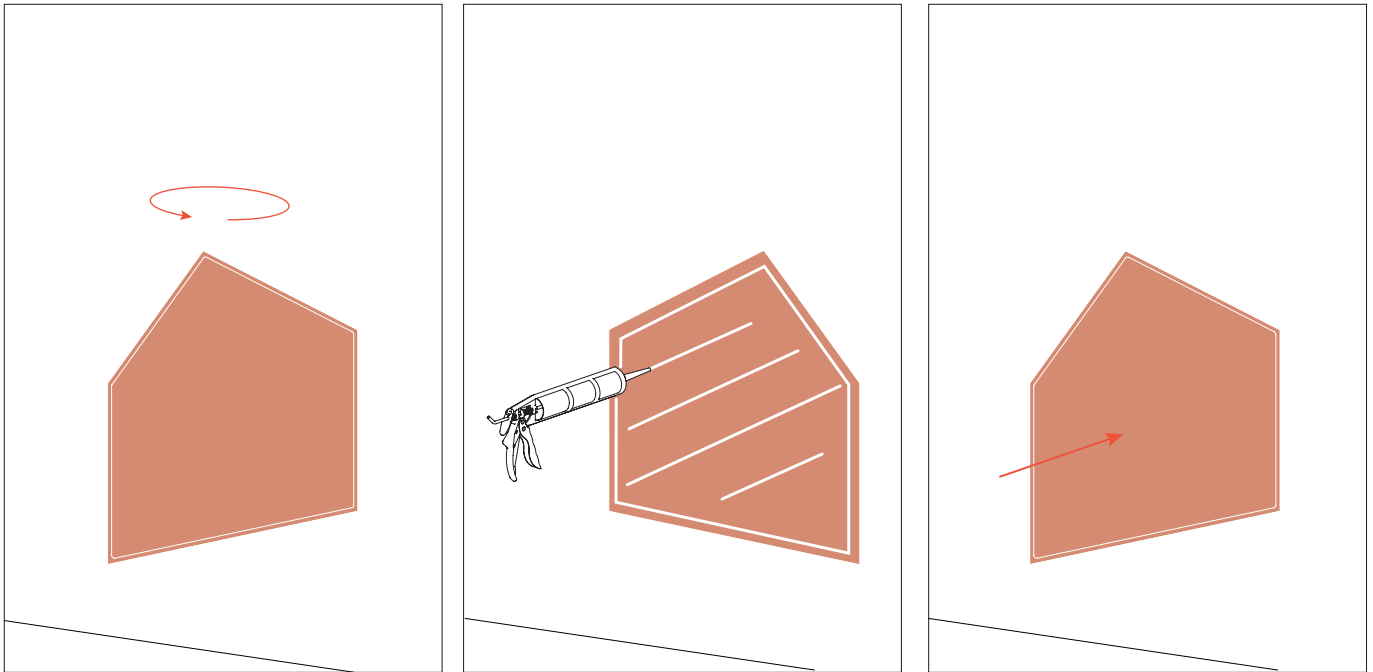

2

Place the panel on the suitably chosen position on the wall. Once in the desired place, press firmly against the wall for 15 seconds.

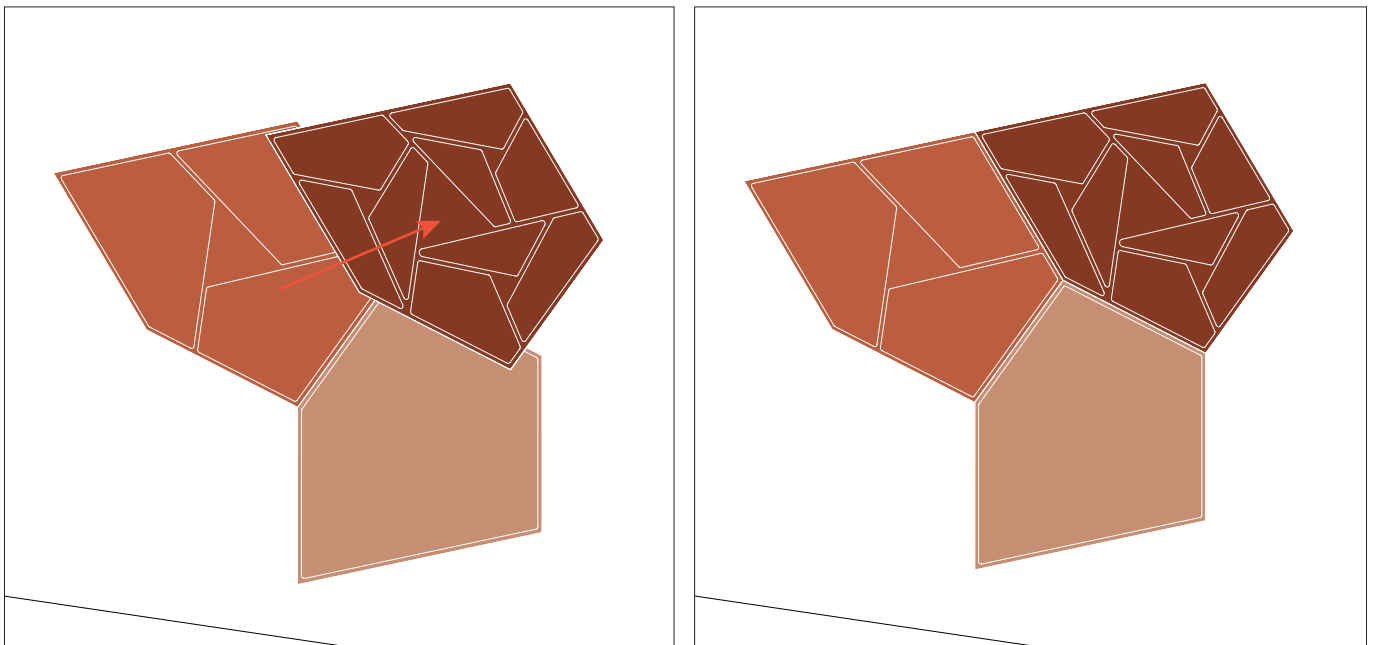


For the installation of Gen Panels on the ceiling, we recommend using Flexi Glue Ultra. To ensure that you maximise the strength of the glue, don't make any adjustments to the panel after bonding. Do not apply Gen Panels behind radiators or too close to a heat source.

Installation Manual

GEN_VMT

Penray 01 Tiles

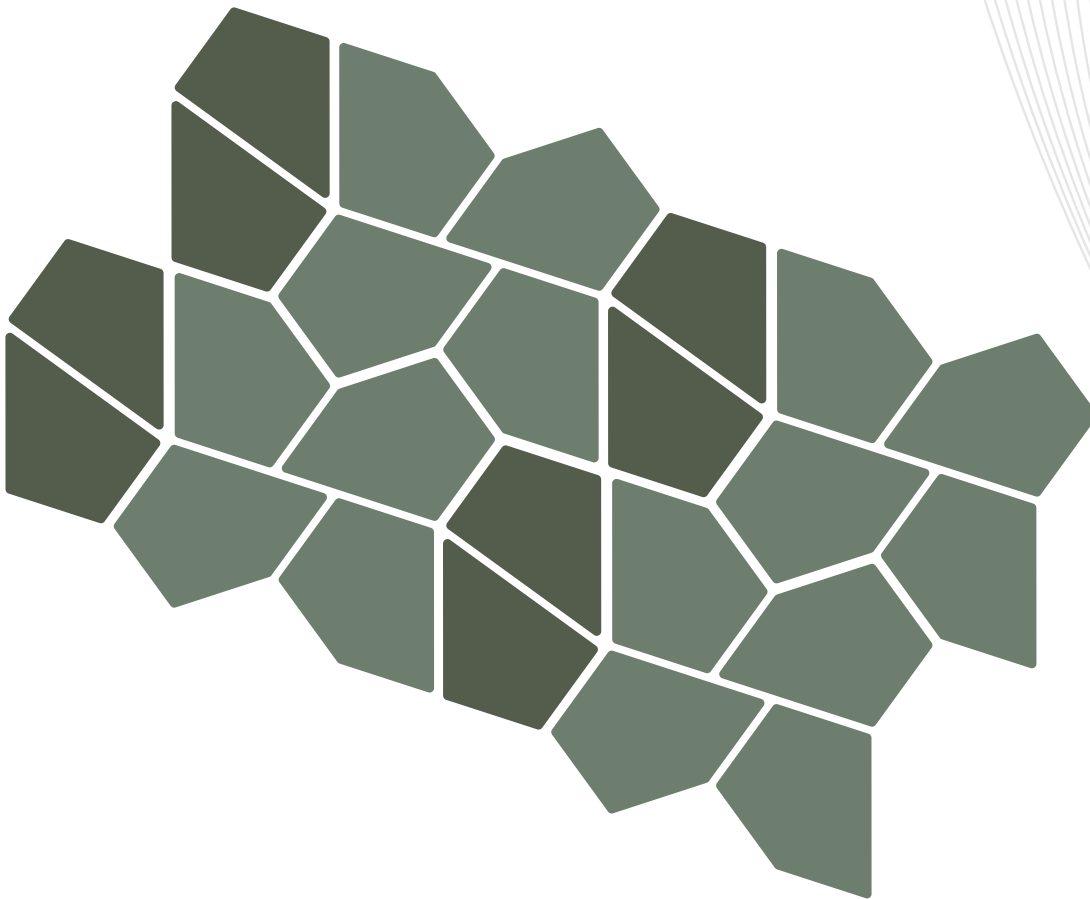


reddot winner 2020


MATERIAL NEEDED:

Included

PENRAY O1_Tiles

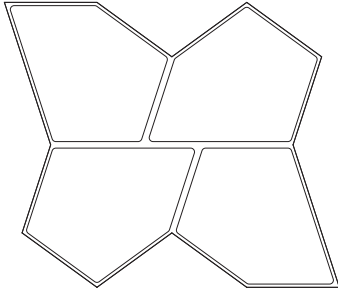


Tiles O1.1 | 6 uni.

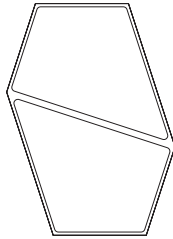


Tiles O1.2 | 6 uni.


Not Included




Level



Measuring Tape





Box Cutter



Glue


POSSIBLE SETUP EXAMPLES

One box (6 panels)

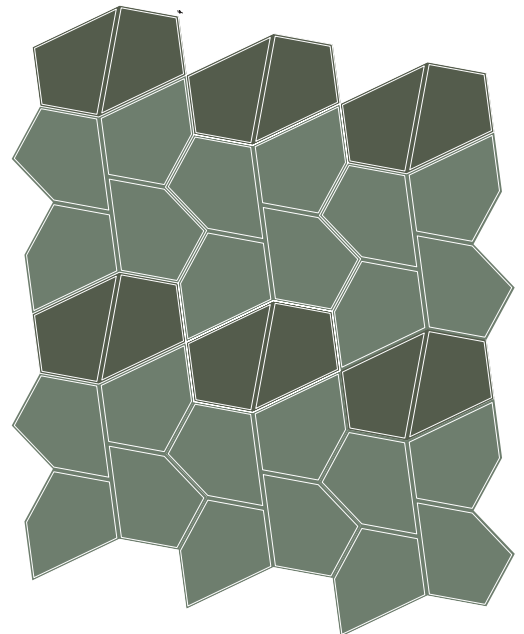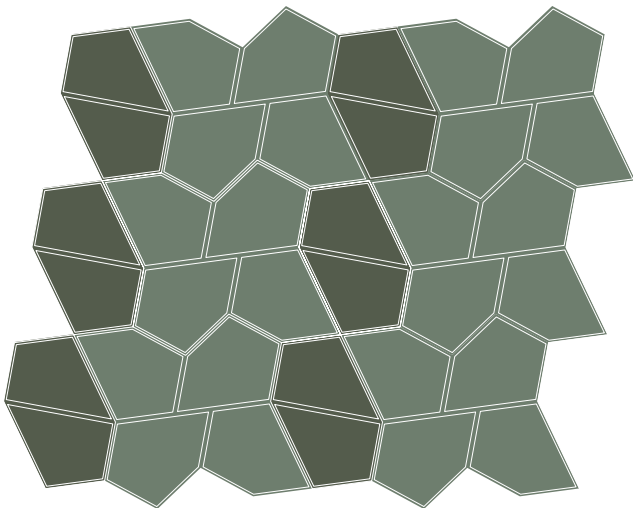


1

Apply Flexi Glue Ultra on the back of the acoustic panel, near the edges and in the center. Do not wait longer than 5 minutes after applying the glue to attach the panel to the wall.

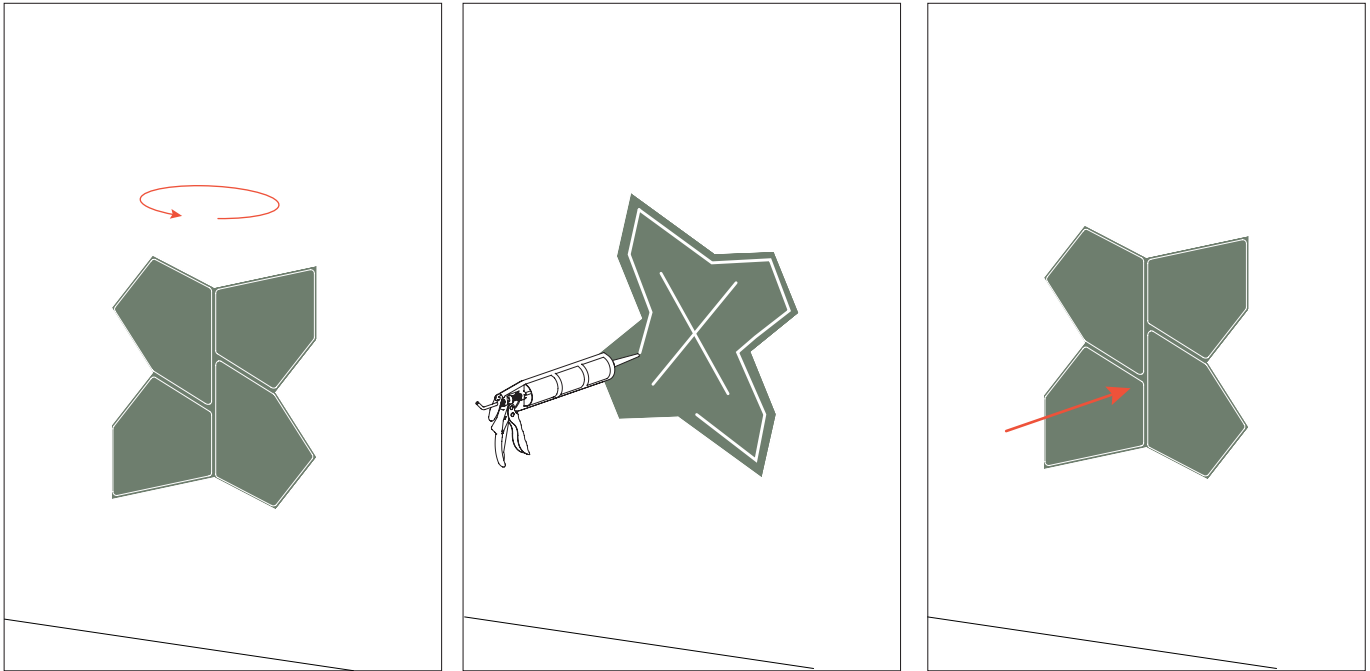

2

Place the panel on the suitably chosen position on the wall. Once in the desired place, press firmly against the wall for 15 seconds.

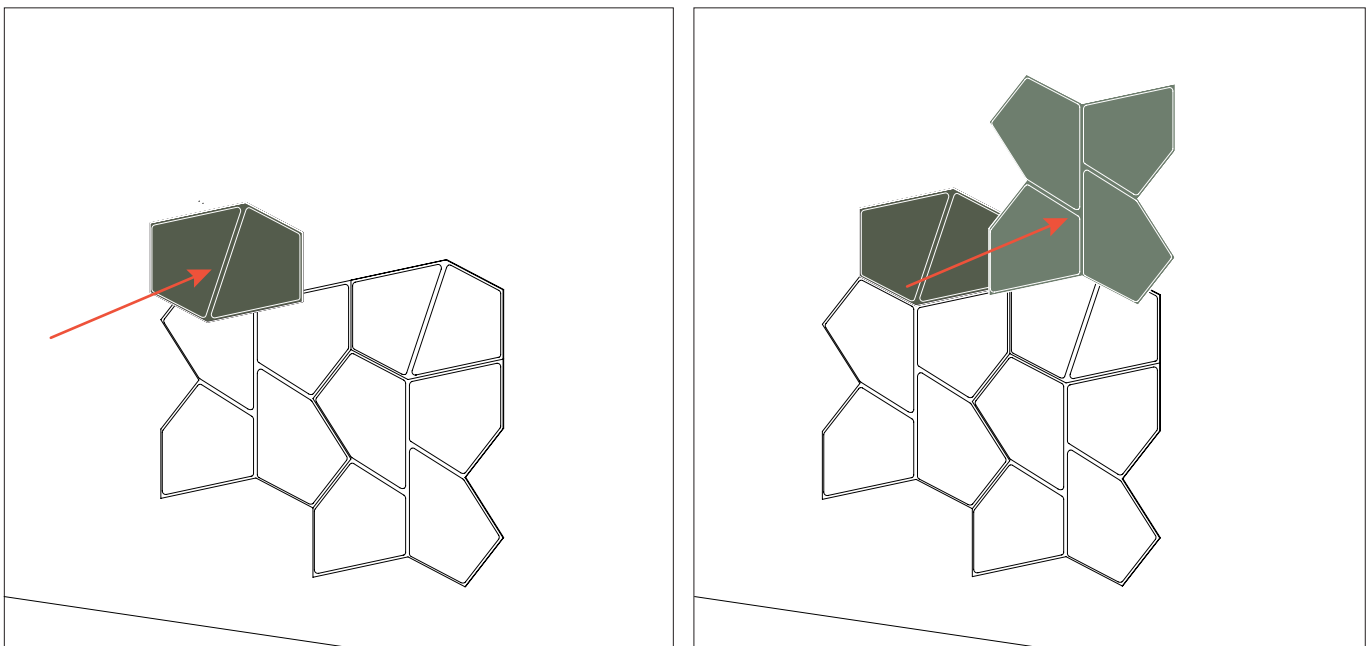


For the installation of Gen Tiles on the ceiling, we recommend using Flexi Glue Ultra. To ensure that you maximise the strength of the glue, don't make any adjustments to the panel after bonding.

Do not apply Gen Tiles behind radiators or too close to a heat source.

Installation Manual

GEN_VMT Penray 02 Tiles

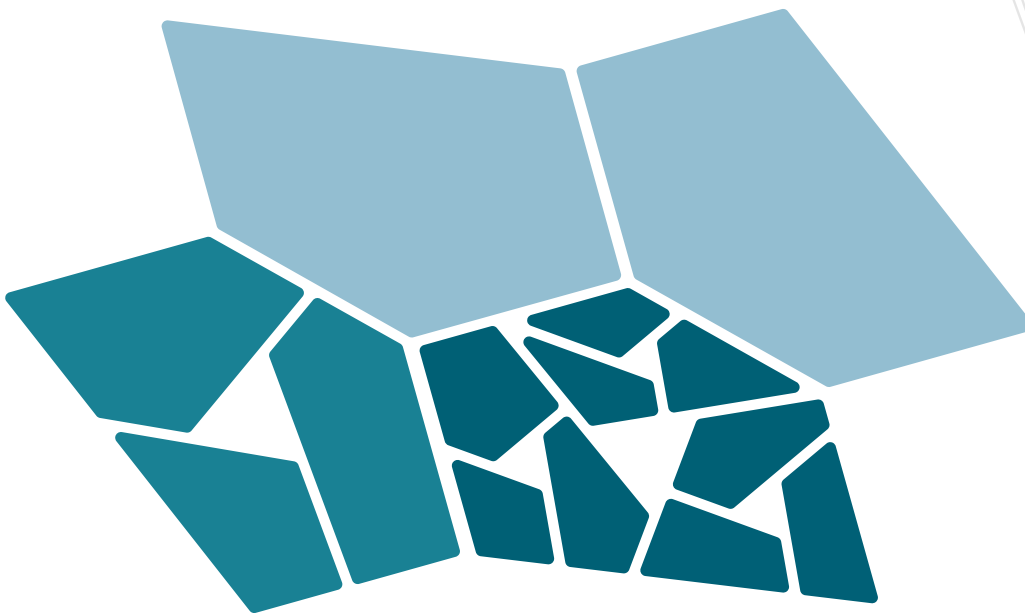


reddot winner 2020


MATERIAL NEEDED:

Included


PENRAY O2_Tiles

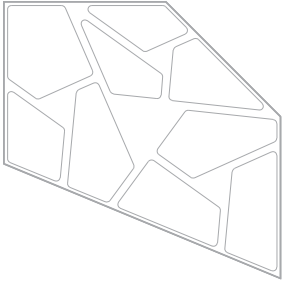


Tiles 02.1 | 3 uni.

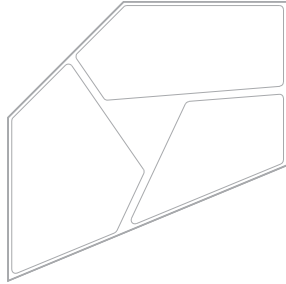

Tiles 02.2 | 3 uni.

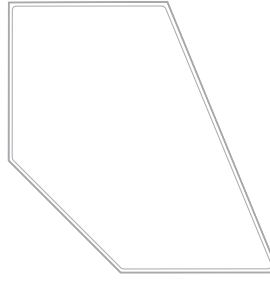


Tiles 02.3 | 3 uni.

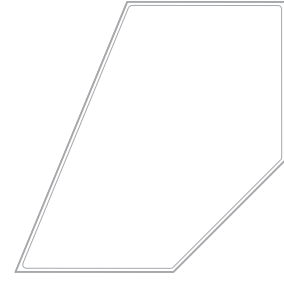


Tiles 02.4 | 3 uni.


Not Included




Level

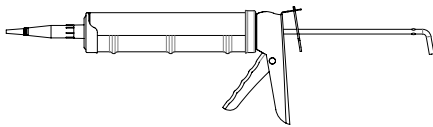

Flexi Glue Ultra




Measuring Tape



Box Cutter


1

Apply Flexi Glue Ultra on the back of the acoustic panel, near the edges and in the center. Do not wait longer than 5 minutes after applying the glue to attach the panel to the wall.

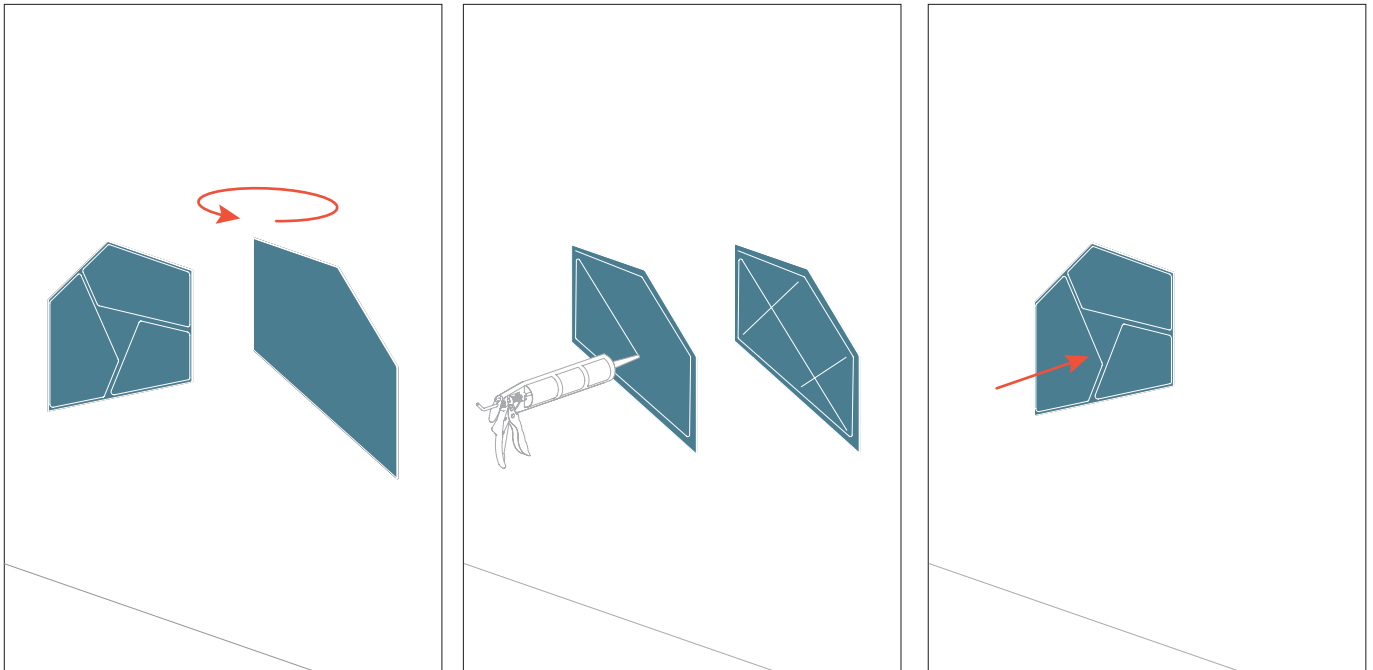

2

Place the panel on the suitably chosen position on the wall. Once in the desired place, press firmly against the wall for 15 seconds.


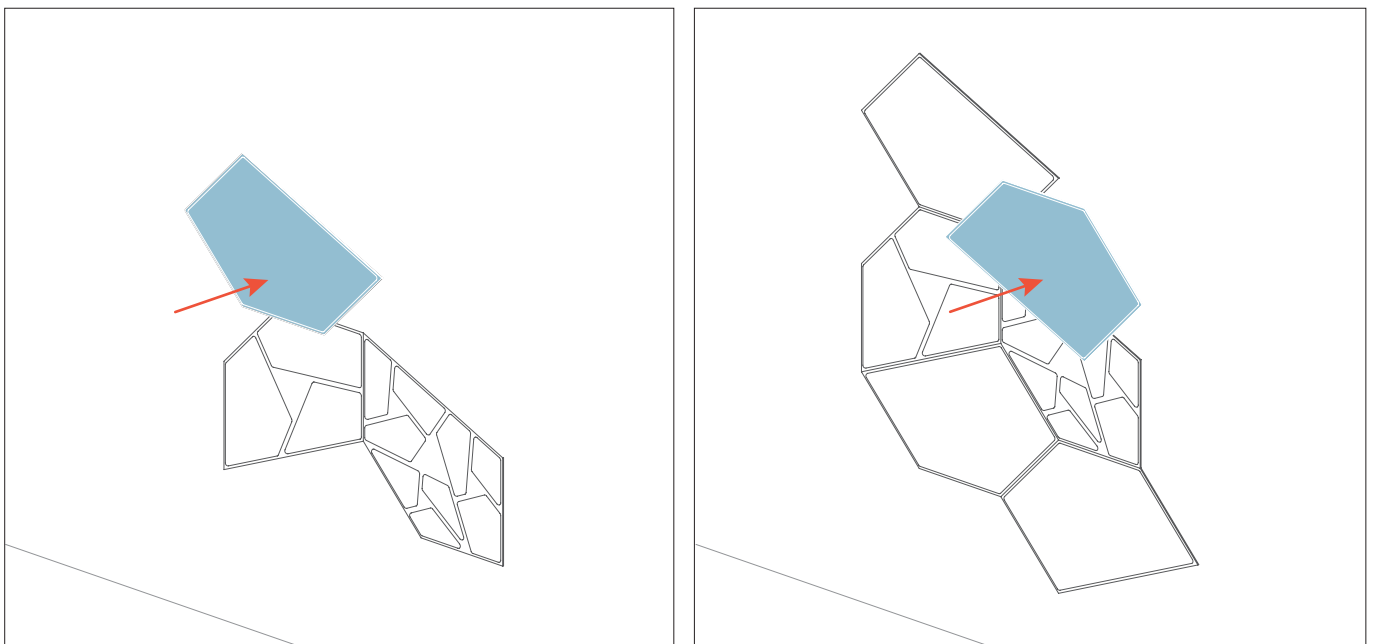


For the installation of Gen Tiles on the ceiling, we recommend using Flexi Glue Ultra. To ensure that you maximise the strength of the glue, don't make any adjustments to the panel after bonding.

Do not apply Gen Tiles behind radiators or too close to a heat source.


POSSIBLE SETUP EXAMPLES

One box (12 tiles)

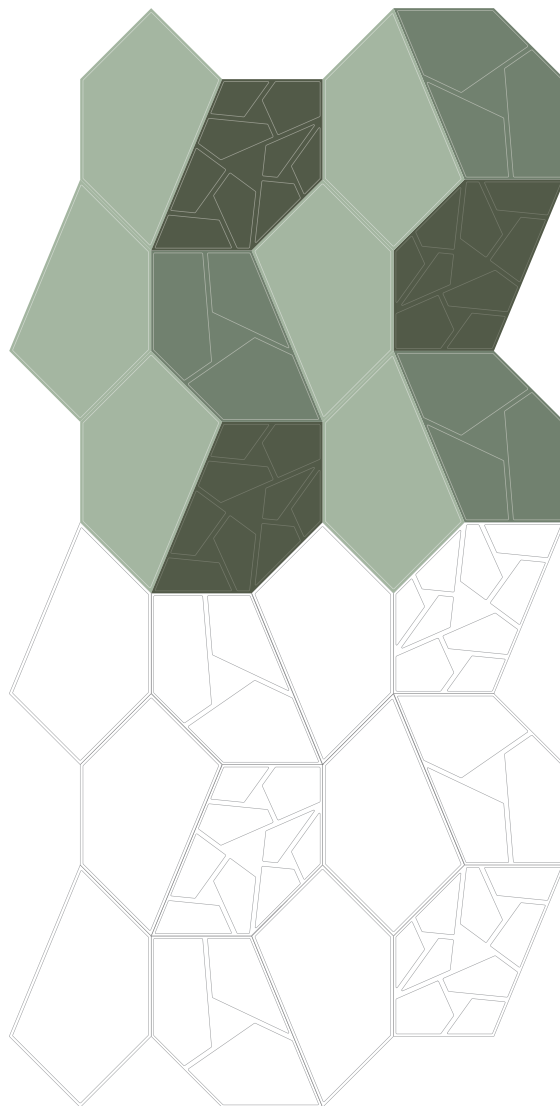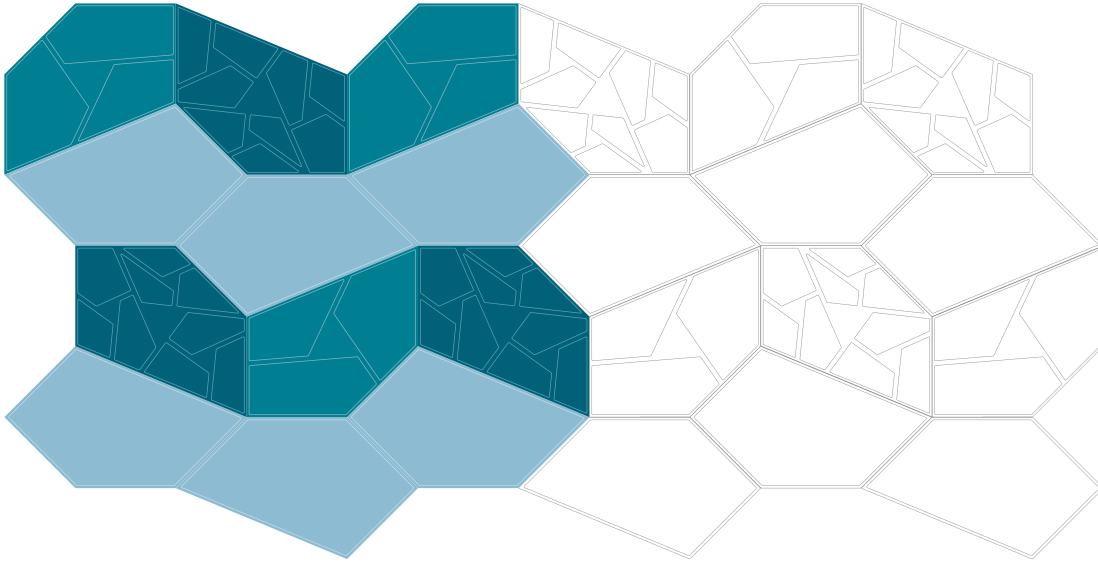



POSSIBLE SETUP EXAMPLES

One box (12 tiles)

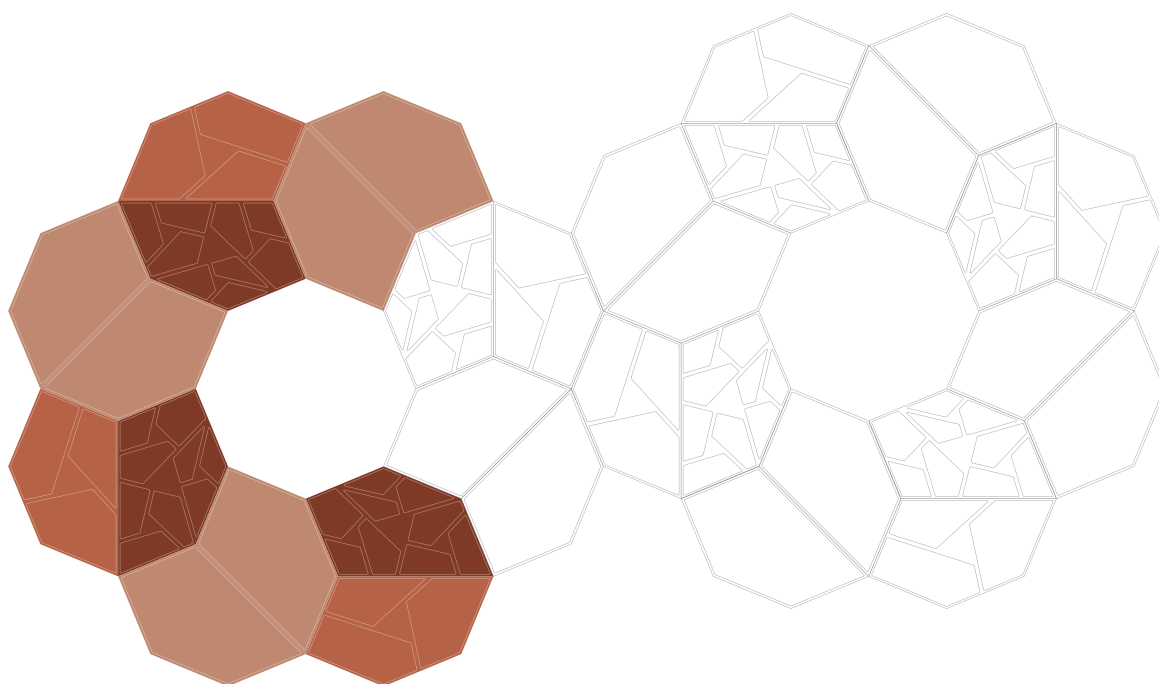

POSSIBLE SETUP EXAMPLES

One box of each color (36 tiles)

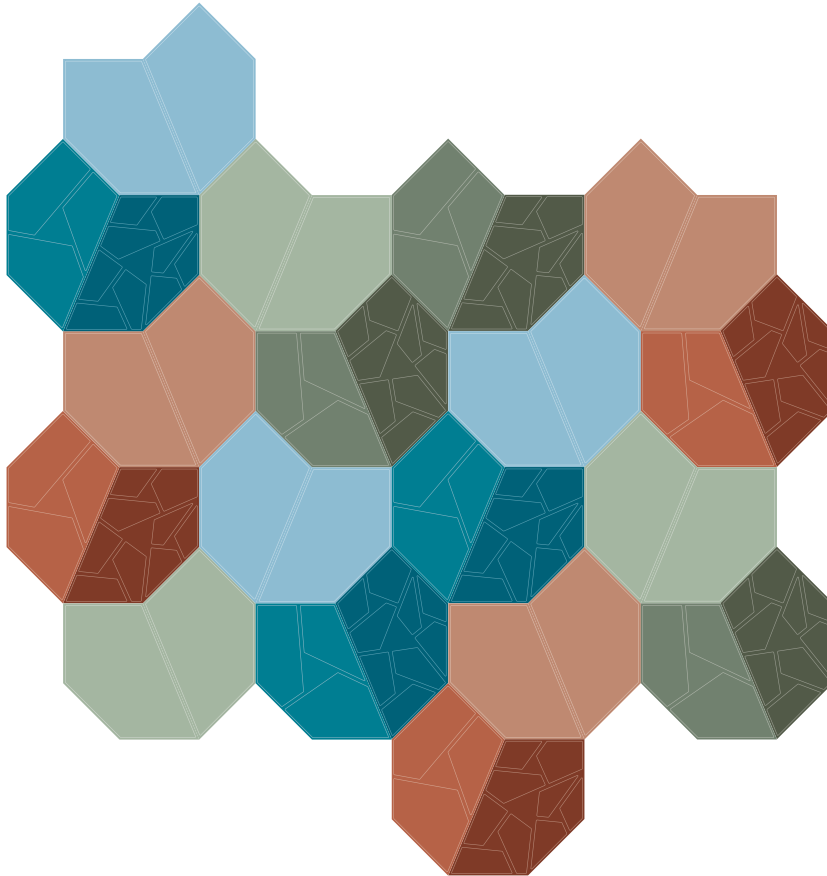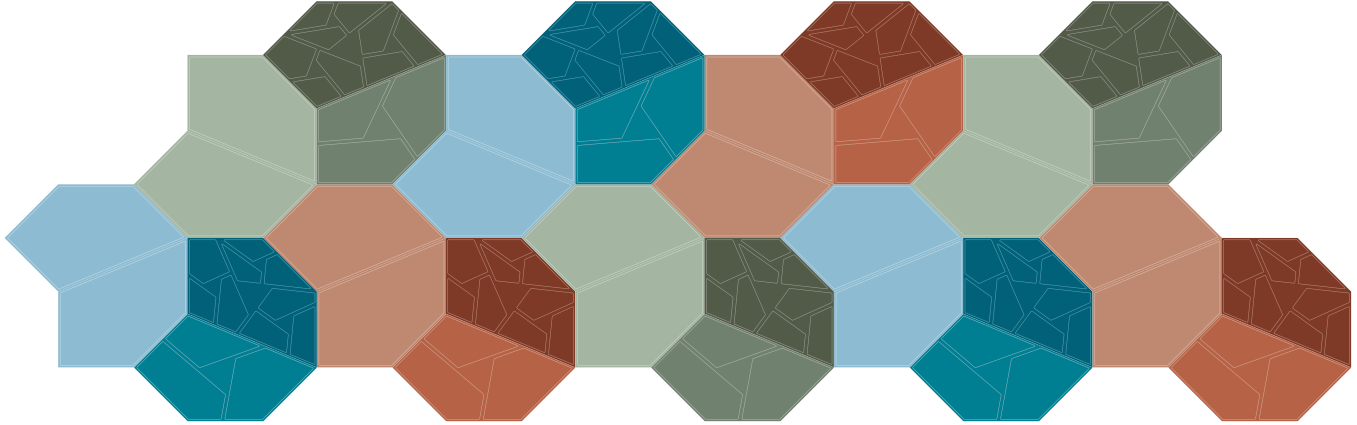



Head Office: Unit No.2G, Laxmi Industrial Estate, New Link Road, Andheri (W), Mumbai - 400 053.

R&D Office: Survey No. 271/4, New Sr. No. 3099/1, Village - Khattalwada, Malkhet, Near Gram Panchayat
Malkhet, Taluka - Umbergaon, Dist - Valsad, Gujarat - 396 120.

Info and Sales: info@uniacoustic.com

www.uniacoustic.com